

Front Foot Assembly

Tools Required:

5/32" Allen key

Remove front foot assembly by undoing bolts with the 5/32" Allen key. Ensure longer leg is fitted towards front of machine (flywheel omitted from illustration for clarity).

