

MODEL D GENERATOR COIL REPLACEMENT

Materials Needed

- phillips screwdriver
- 7/16" (11 mm) or adjustable wrench
- 5/32" (4 mm) allen wrench

Procedure

- 1) Remove two generator cover screws with the phillips screwdriver. Remove generator cover.
- 2) Note wire routing before removing generator coil unit from the generator base.
- 3) Using the allen wrench and 7/16" wrench, loosen the two chain guide fasteners. Unplug the generator wire from the monitor and remove wire and generator coil unit.
- 4) Install the new generator coil back into the base and install the cover. Route the wire back up to the monitor. Avoid bending, pinching or kinking the wire by allowing adequate slack as shown in the inset below. The monitor arm and monitor should be able to move freely. Tighten chain guide fasteners.

